

## TASK: Wand Tilter Replacement & Wand or Ring Attachment – ½” and 1” Horizontal Aluminum or 1” Wood

Use If/When: Wand Tilter Replacement & Wand or Ring Attachment

Tools Needed: Flathead screwdriver, Needle nose pliers

1. If possible, tilt the slats horizontally. Lift and lock the slats in the raised position. Remove the blind from the mounting brackets by pushing the tab on the bracket away from the blind.



2. Remove wand. If the blind has a wand with a connector clip, use needle nose pliers to grasp the wand connector clip below the tilter stem. Twist the clip to disengage from the grooves in the tilter stem.



3. Remove the blind end caps.



4. Slide the tilt rod out the opposite end of the tilter until it is free of the tilter.




## TASK: Wand Tilter Replacement & Wand or Ring Attachment – ½” and 1” Horizontal Aluminum or 1” Wood


Use If/When: Wand Tilter Replacement & Wand or Ring Attachment

Tools Needed: Flathead screwdriver, Needle nose pliers

5. Gently spread sides of the headrail and pull the tilter up and out.

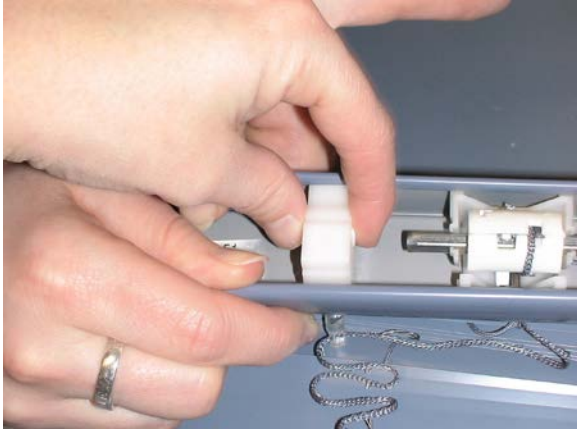

6. Place the new wand tilter into the rail, guiding the stem through the cut out. Be sure the tab is to the top. Push down firmly on the back side until the tilter is in position.

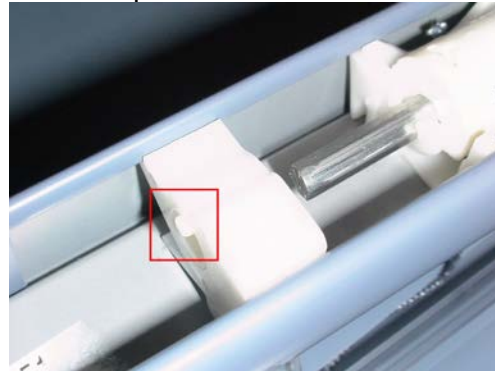

7. Slide the tilt rod back into the tilter.



8. Replace the end caps.



**TASK: Wand Tilter Replacement & Wand or Ring Attachment – ½” and 1” Horizontal Aluminum or 1” Wood**

**Use If/When: Wand Tilter Replacement & Wand or Ring Attachment**

**Tools Needed: Flathead screwdriver, Needle nose pliers**

**9.** To connect the ring or wand with a connector clip, pull the end of the connector through the hole on the wand or place ring hole over connector.



**10.** Locate the hole at the top of the long groove on the tilter stem and insert the wand connector clip.



**11.** Pull the wand connector clip down and to the short side of the tilter stem.



**12.** Tilt the slats to make sure the blind operates properly.



**TASK: Wand Tilter Replacement & Wand or Ring Attachment – ½” and 1” Horizontal Aluminum or 1” Wood**

**Use If/When: Wand Tilter Replacement & Wand or Ring Attachment**

**Tools Needed: Flathead screwdriver, Needle nose pliers**

**13. Reinstall blind in brackets.**

