

TASK: Correct tilter mechanism – 2” or Greater Horizontal Blinds

Use If/When: Slats will not tilt.

Tools Needed: Screwdriver


1. Remove the valance from the mounting clips. Tilt the slats horizontally. Lift and lock the slats in the raised position leaving approximately 1” of space between the top slat and the underside of the headrail.




2. Remove the blind from the mounting brackets.



3. Check to make sure tilt rod is completely into the tilter mechanism. Tilt rod will be inserted so you can see it on both sides of the tilter mechanism.

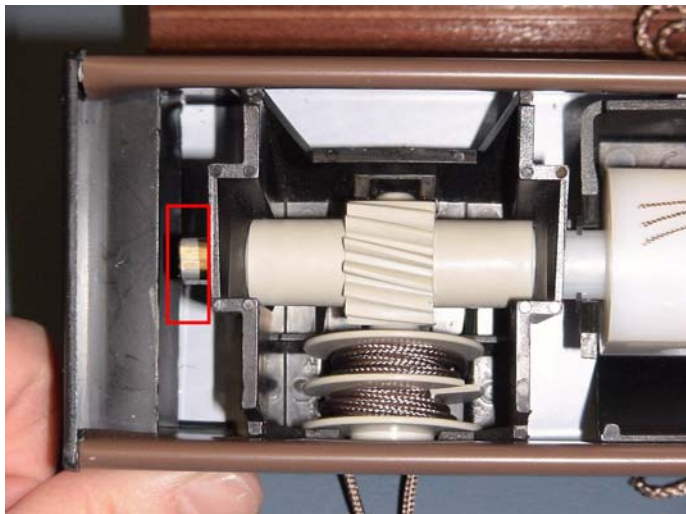

4. Tilt slats to make sure the blind operates properly.

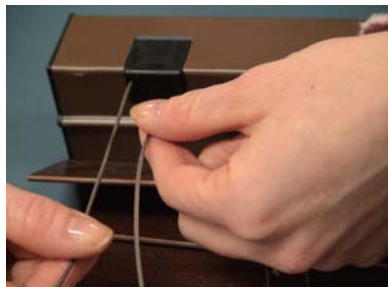

TASK: Correct tilter mechanism – 2” or Greater Horizontal Blinds

Use If/When: Slats will not tilt.

Tools Needed: Screwdriver

5. Reinstall blind in brackets.
Reinstall valance in clips.

